


ADDITIONAL 1/4" UPWARD
ADJUSTMENT ONLY

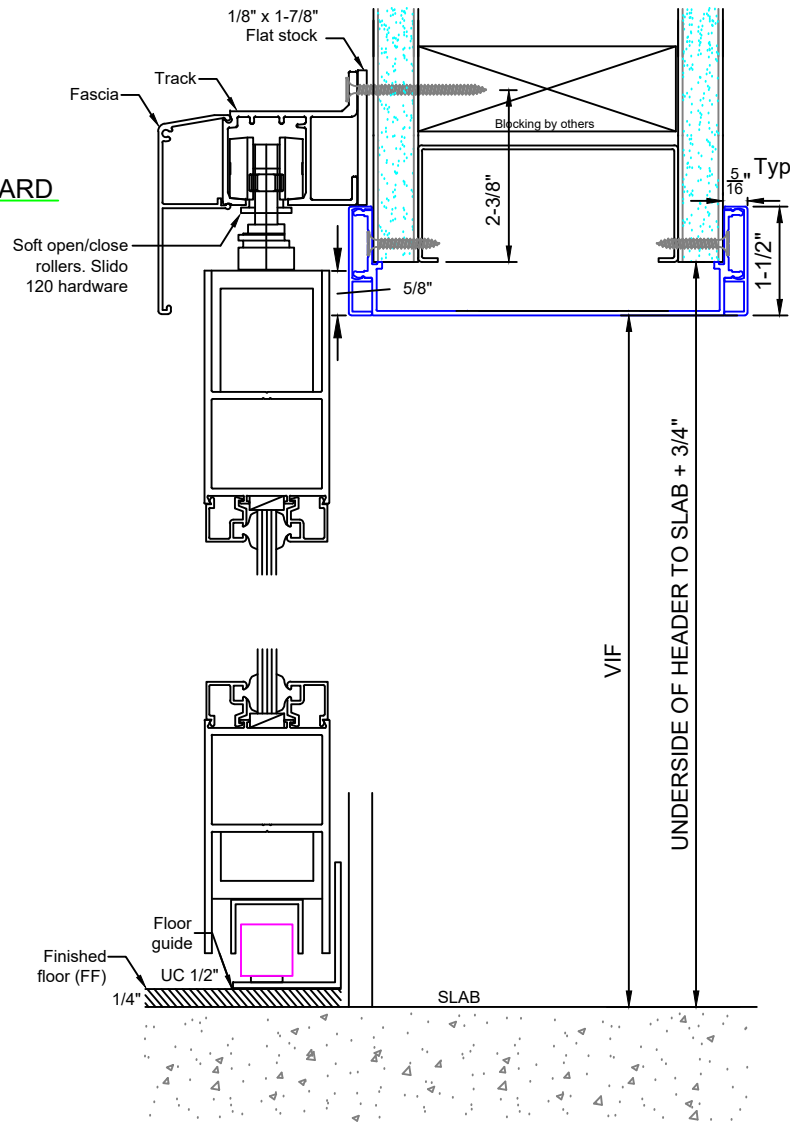

THE WOOD BLOCKING MUST BE THE SAME LENGTH AS THE TRACK

NET DOOR HEIGHT FORMULA:

UNDERSIDE OF HEADER TO SLAB
 SUBTRACT THE THICKNESS OF THE FINISHED FLOORING
 SUBTRACT A 1/2" UNDERCUT
 ADD 5/8" PENETRATION AT THE TOP OF THE DOOR



2301 E. Vernon Avenue	7601 Ambassador Row, Ste 102	110 Viaduct Road
Vernon, CA 90058	Dallas, TX 75247	Stamford, CT 06907
866.443.7258	214.295.2165	203.316.8033
323.908.5451 Fax	214.496.0156 Fax	203.316.0019 Fax