


STANDARD HINGE AND STRIKE LOCATIONS (1-1/2 PAIR)

D.L.O.	80"	81"	82"	83"	84"	85"
(1) TOP	5"	5"	5"	5"	5"	5"
(2) MIDDLE	35-1/4"	35-3/4"	36-1/4"	36-3/4"	37-1/4"	37-3/4"
(3) BOTTOM	65-1/2"	66-1/2"	67-1/2"	68-1/2"	69-1/2"	70-1/2"
(C) STRIKE	42"	43"	44"	45"	46"	47"

D.L.O.	86"	87"	88"	89"	90"	91"
(1) TOP	5"	5"	5"	5"	5"	5"
(2) MIDDLE	38-1/4"	38-3/4"	39-1/4"	39-3/4"	40-1/4"	40-3/4"
(3) BOTTOM	71-1/2"	72-1/2"	73-1/2"	74-1/2"	75-1/2"	76-1/2"
(C) STRIKE	48"	49"	50"	51"	52"	53"

D.L.O.	92"	92"	94"	95"	96"
(1) TOP	5"	5"	5"	5"	5"
(2) MIDDLE	41-1/4"	34-3/4"	42-1/4"	42-3/4"	43-1/4"
(3) BOTTOM	77-1/2"	78-1/2"	79-1/2"	80-1/2"	81-1/2"
(C) STRIKE	54"	55"	56"	57"	58"

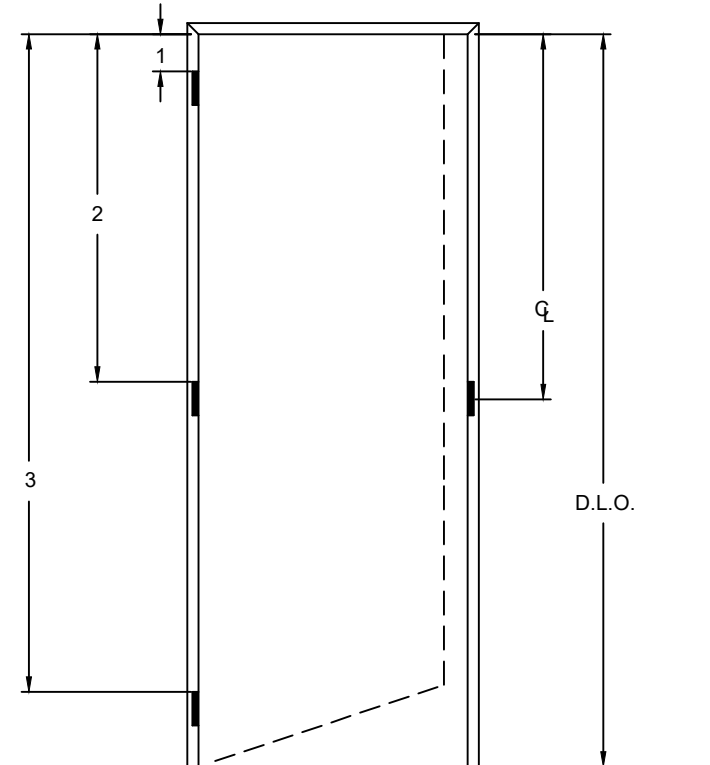

D.L.O. - Daylight Opening

Hinges are measured from underside of header to top of hinge cut-out on frame.

Strike is measured from underside of header to center line of strike plate.

Backset on frames is 3/8"



WilsonPartitions®

2301 E. Vernon Ave.
Vernon, CA 90058
866.443.7258
323.908.5430
323.908.5451 Fax

7601 Ambassador Row, Suite 102
Dallas, TX 75247
214.295.2165
214.496.0156 Fax

110 Viaduct Road
Stamford, CT 06907
203.316.8033
203.316.0019 Fax